


DISCHARGE PRESSURE COMPARISON TEST

R-12, R-406a, HC-12a
Manitowoc Ice Machine, Model EY0604A

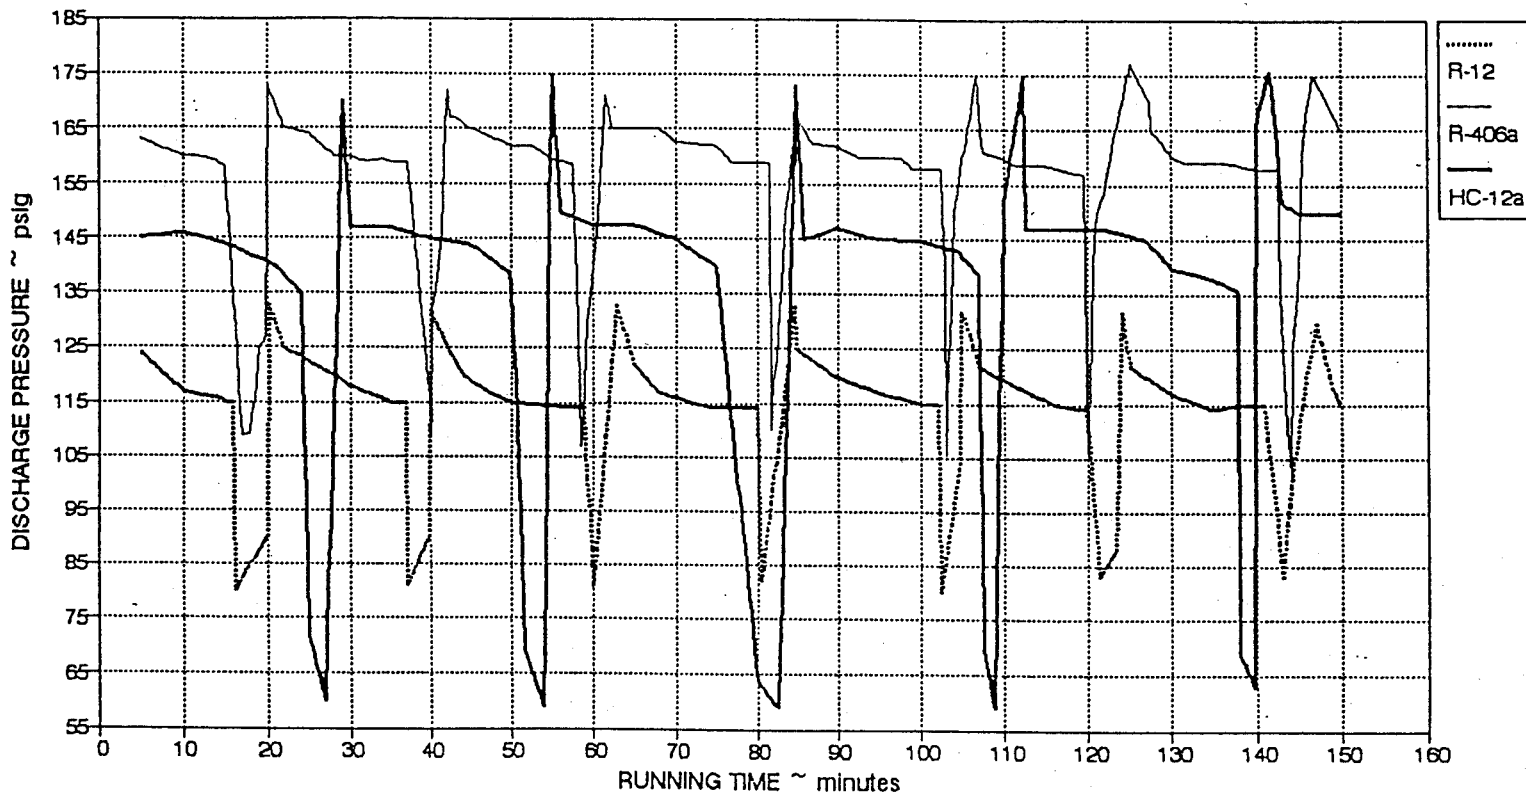

NOTE: Tests were run under the following conditions: ambient air temp 80°F., supply water temp 80°F., Running voltage 197 vac.

	R-12	R-406a	HC-12a
Quantity	32 ounces	26 ounces	13.8 ounces
Running Amperage	8.5 amps	8 amps	7 amps
Freeze Cycle, approximate	20 minutes	20.5 minutes	25 minutes
Harvest Cycle, approximate	2 minutes	2.25 minutes	3 minutes